



AM | FM Blue-tooth Source Unit

Operators Guide:



Controls:

- 1) **Power On / Off / MUTE** – The power button is a multi-function button, depending on how long you hold the button. A quick press turns the unit on. A press and hold, engages the MUTE, while a long press powers the unit off.
- 2) **Audio Mode** – Press the button quickly, to see show 'SEL' on the screen. The with quick presses, scroll through each of the audio functions: BASS, TRE, BAL, FAD, LOUD, EQ, BEEP. Each function is adjusted using the #5 button VOL Up/Down.
- 3) **APS – In FM or AM Mode** – Press the button quickly to scan stored radio stations. Press and hold to automatically scan all stations programmed with a short audition of each. Press the button again to stop the scan.
- 4) **MOD** – This is your input mode switch. Press to scroll through your various inputs, FM, BT, IPOD, USB, AUX IN and RCA OUT.

- 5) **VOL** – Volume Up / Down. Press quickly for small increments in volume, hold down for quicker adjustments.
- 6) **BND / Clock** – This multi-function button when pressed quickly, scrolls between your FM1, 2 and 3 plus AM 1 and 2 banks for programmed stations. Press and hold button #6 to adjust the clock. When in 'clock' mode, press and hold again to adjust. Quickly press to switch hour or minute. Use the #5 VOL Up/Down button to adjust time.
- 7) **RWD / BACK** – This multi-function button works with your music sources. In radio mode, quickly press to go back to the next strongest station. For other sources, press quickly to go back to the beginning of the current song, press twice to go back to the previous track. Press and hold for fast reverse within the current selection.
- 8) **FWD / Forward** – This multi-function button works with your music sources. In radio mode, quickly press to go forward to the next strongest station. For other sources, press quickly to go to the beginning of the next song. Press and hold for fast forward within the current selection.
- 9) **1 – Play / Pause** - This multi-function button works in several modes. For the BT, USB, Apple Device mode this is play and pause. In FM and AM mode, quickly press to select station pre-set #1. In radio mode, press and hold to store the current station to this pre-set.
- 10) **2 – INT / Intro** – This multi-function button works in several modes. For the BT, USB, press this to play the introduction (first 10 seconds) of each track. Press again to turn off the feature. (not compatible in IPOD mode). In FM and AM mode, quickly press to select station pre-set #2. In radio mode, press and hold to store the current station to this pre-set.
- 11) **3 – RPT / Repeat** – This multi-function button works in several modes. For the BT, USB, press this button to repeat the current song. Press again to turn off the feature (not compatible in IPOD mode). In FM and AM mode, quickly press to select station pre-set #3. In radio mode, press and hold to store the current station to this pre-set.
- 12) **4 – RDM / Random** – This multi-function button works in several modes. For the BT, USB, press the button to allow random songs to play from the unit. The RDM will not select random tracks from different devices, only from the unit selected. (not compatible in IPOD mode). In FM and AM mode, quickly press to select station pre-set #4. In radio mode, press and hold to store current station to this pre-set.